


TOPSKY

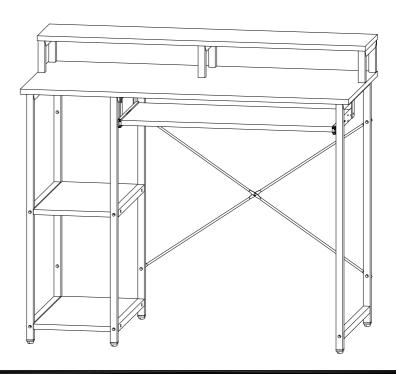

CUSTOMER SERVICE

For fastest service on claims, request for replacement parts, or questions please visit our website at

www.topskyfurniture.com

e-mail: service@topskyfurniture.com

Phone number: +1 725-333-1988


if that is possible, order-ID, pictures or detail of issue will be helpful.

Special Warnings

- Ø Keep your furniture out of direct sunlight. Please use desk pads and coasters to protect the surface from dents, scratches, and moisture from hot or cold liquids.
- Ø For cleaning, wipe the surface with a damp (not wet) cloth or wipe dry with a clean lint free cotton cloth. Window cleaning liquid or a similar cleaning liquid can be used to clean glass surface.


Operation Instructions


- Ø Please check that all parts are present before you start the assembly of your furniture. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
- Ø Please periodically check all fitting and re-tighten as necessary.
- Ø Please assemble the table by 2 persons or more.
- Ø Do NOT over tighten hardware.

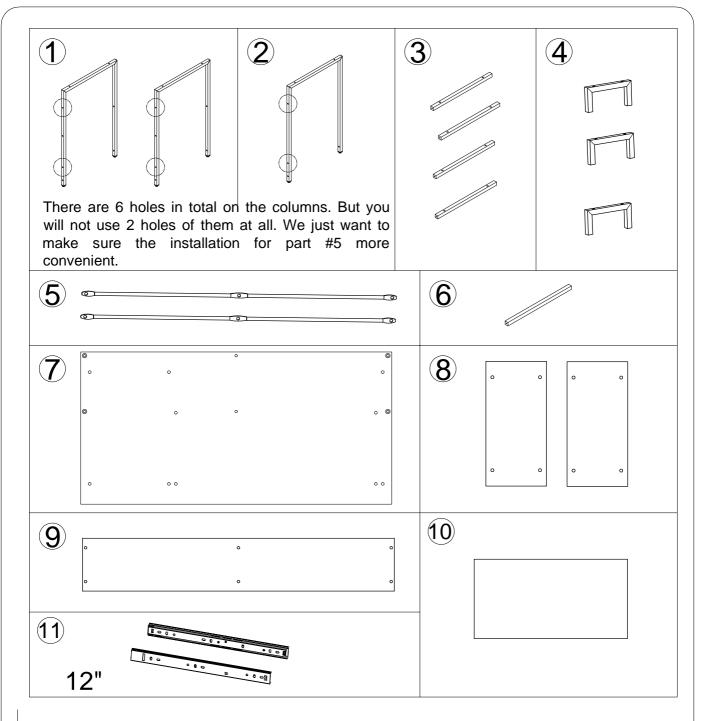


Part.	Item.	QTY.	
Α	M6X30	22	
В	M6X12	5	
С	M4X8	4	(†)
D	M5X55	8	(4)
Е	M3.5X14	4	

Part.	Item.	QTY.	
F	M6	5	
G		4	
Н	M6X35	10	
I		1	
J		1	5

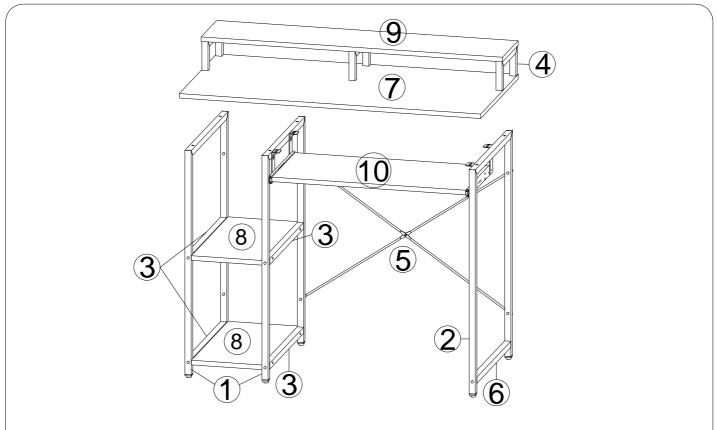


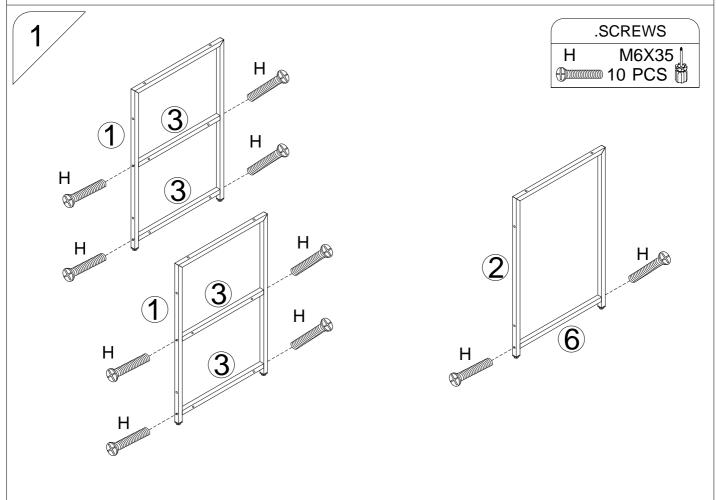

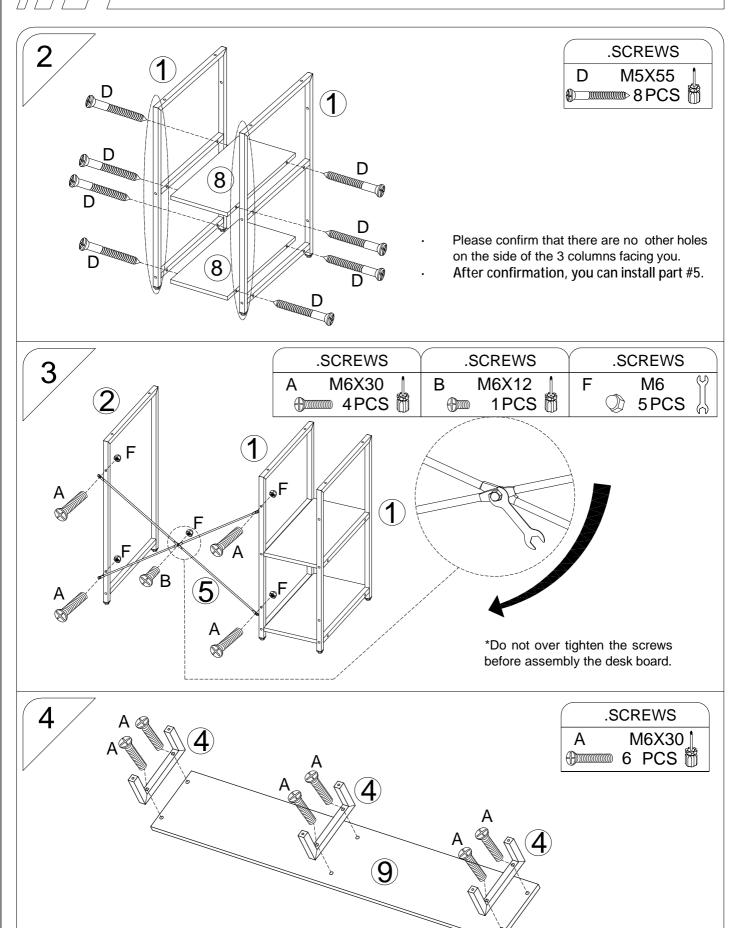


P.5

5

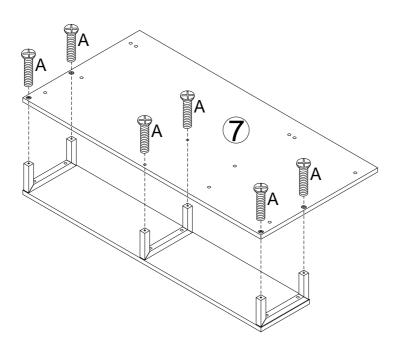

6

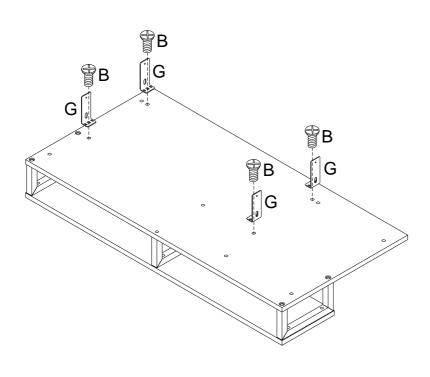

SCREWS

B M6X12

P 4PCS

G
4PCS

