


TOPSKY

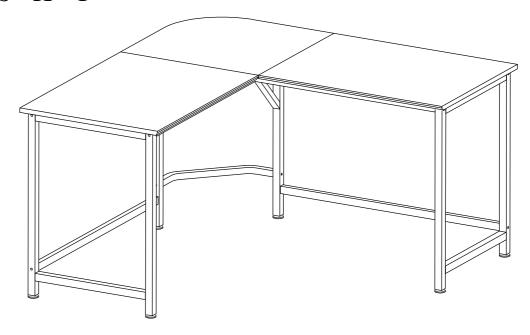

DO NOT RETURN !!!

Please contact our service team with Order-ID. And if that is possible, pictures or detail of issue will be helpful for a fast way solution.

service@topskyfurniture.com
Phone number: +1 725-333-1988

Special Warnings


- Ø Keep your furniture out of direct sunlight. Please use desk pads and coasters to protect the surface from dents, scratches, and moisture from hot or cold liquids.
- Ø For cleaning, wipe the surface with a damp (not wet) cloth or wipe dry with a clean lint free cotton cloth. Window cleaning liquid or a similar cleaning liquid can be used to clean glass surface.

Operation Instructions


- Ø Please check that all parts are present before you start the assembly of your furniture. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
- Ø Please periodically check all fitting and re-tighten as necessary.
- Ø Please assemble the table by 2 persons or more.
- Ø Do NOT over tighten hardware.

TS500004


P.2

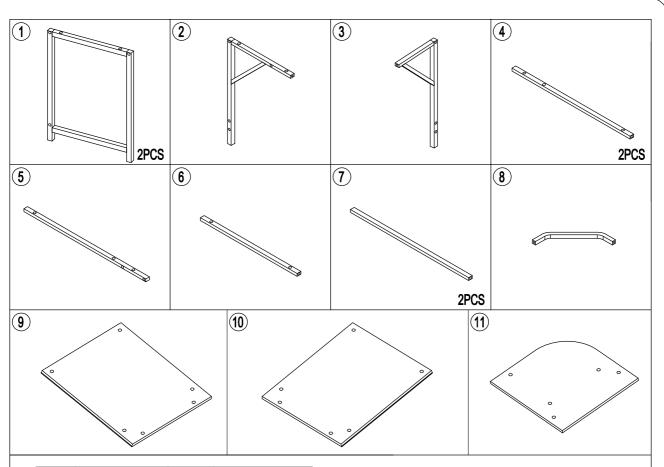

Part.	Item.	QTY.	
Α	M6X45	15	
В	M6X30	13	4
С	M6X40	4	(
D	M8X¢50	6	
Е		1	

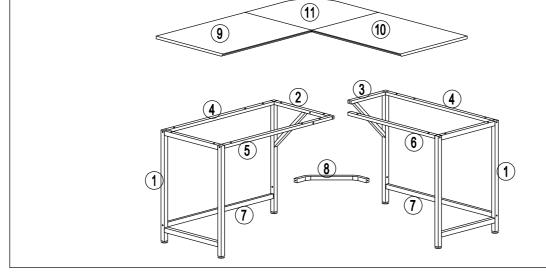

TS500004

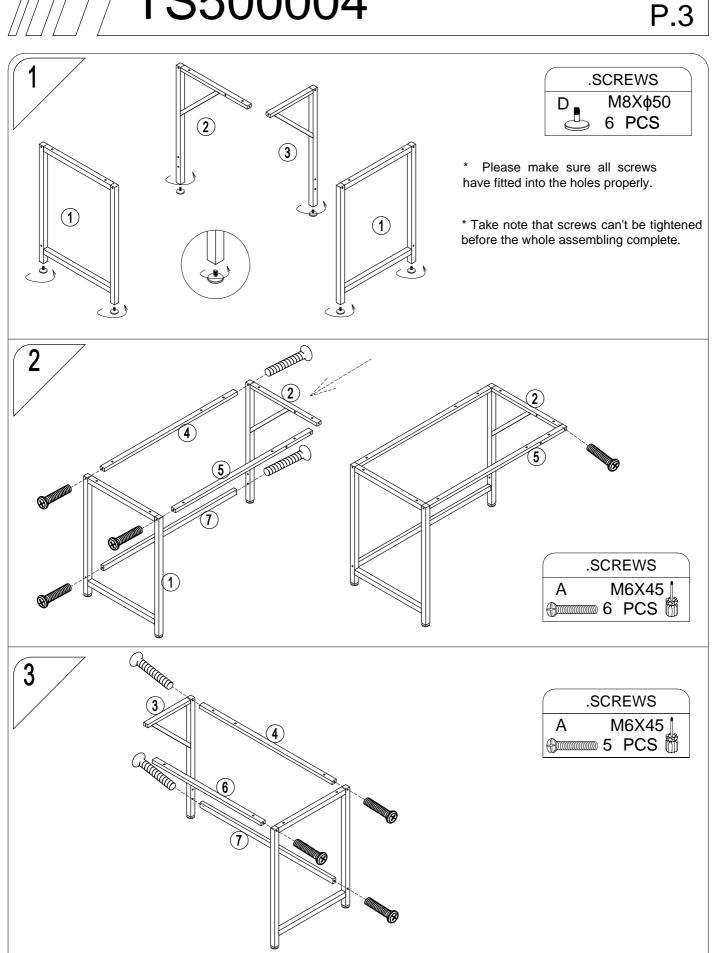

TS500004

P.4

