

宽 60mm

正面 70mm




SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved

Disclaimer

First of all, thank you for using our products! Please read this manual before using and use this product correctly. This product due to upgraded specification subject to change, without prior notice. Open-ear smart audio glasses, this product is a bluetooth speaker with stereo function, easy to operate, stylish and practical, easy to carry.

Packing list

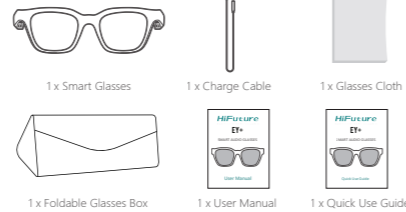

Warm warning: The image shown here is indicative only. The actual product may differ.

SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved


Specification

Color	Black
LENS	Black
Material	Nylon
SIZE	52*18*149
Lens material	Polycarbonate
BT protocol	5.0
Charge time	2H
Work time	5H
Standby time	180H(Bluetooth connected)
Battery	110mAh
Charge voltage¤t	DC5V 160mA(MAX.)
Speakers	Dual speakers,Stereo

- Qualcomm 3024 Bluetooth 5.0 chip.
- Left and right dual speakers,directional playback, true stereo sound.

SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved

Operation instructions

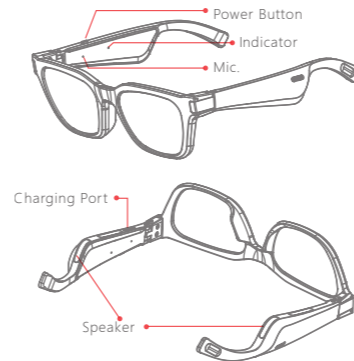

Tips: chagre time:2-3 hours. Battery will be discharged automatically is left unused over a long period of time.

SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved

Operation instructions

	Operating	Glasses tone	Indicator activity
On/Off	Tap button for 3 seconds	Power on	Hold on for 1 seconds
	Tap button for 5 seconds	Power off	Hold on for 1 seconds
Pairing& Connection	In the off status Tap button for 3 seconds	Pairing	Flash continuously
	In the off status Tap button for 10 seconds	Clear away paired device list	Flash continuously
	While power on and the phone is disconnected while power on and the phone is connected	Fast blinking white	Slow blinking white
	The phone is disconnected	Connected	Slow blinking white
	Status	Glasses tone	Indicator activity
Charging& Alarm	Low-power alarm	Battery low	LED light flash every 2 seconds
	Low power off	Power off	Hold on for 1 seconds
	Charging	Solid white	
	Charging completed	Slow blinking white	
	Button operating	Function	
Play music	Tap once	Play/Pause	
	Double-Tap	Skip forward	
	Triple-Tap	Skip backward	
Call funtions	Tap once	Answer a call	
	Double-Tap	End a call	
	Triple-Tap	Last numbrer Redial	
During the call	Tap once	Answer incoming call and end the current call	
	Double-Tap	Answer incoming call and put the current call on hold	
Voice Assistant	Double Tap the button while connecting with the smartphone.		

SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved

V210408



SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved

Customer service

For more product information please visit www.hifuturegroup.com
Contact your local authorised dealer/ customer service.
email: info@hifuturegroup.com
Service hot line: +86 755 8256 1018

Limited Warranty

Note: Disassembling device voids warranty
Note: Liquid submersion voids warranty

SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved

Tips

1. Please read the instructions carefully before using this product and keep this manual for further use.
2. For the first time, please fully charge this glasses.
3. Battery will be discharged automatically is left unused over a long period of time (more than two weeks), charge it before using.

Warning

1. Do not dismantl or repair this product for any reason, as this may result in fire, electronic breakdown or even complete damage to the product.
2. Do not place the device in an environment where the temperature is too low or too high (below 0 °C or above 45 °C).
3. Do not get the product wet with liquid or immerse in liquid.
4. Do not expose the glasses to the sun for a long time, otherwise it will be easily deformed and broken.

SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved

Important safety information I

1. Please read all safety information before using this equipment to ensure correct and safe use.
2. Use of a power source, charger or battery that is not approved by this manufacturer may cause fire, explosion or other hazards.
3. Use accessories approved by this manufacturer and compatible with this model. Please use the device within the temperature range of 0 °C ~ 35 °C, and store the device and its accessories within the temperature range of -20 °C ~ 55 °C. When the ambient temperature is too high or too low, it may cause equipment failure.
4. If the device uses a non-removable internal battery, do not replace the battery yourself to avoid damaging the battery or device. The battery can only be replaced by an authorized service center.
5. Please charge according to the charger specified by the manufacturer. Using a charger with other voltages may cause leakage, fire or damage to the device and charger.

SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved

Important safety information II

6. If charging is complete, disconnect the charger from the device and unplug the charger from the power outlet. Do not charge more than 12 hours.
7. Please do not throw the old battery into your household waste for disposal. If the battery is improperly handled, it may cause the battery to catch fire and explode. Please dispose of this device, battery and other accessories in accordance with local regulations.
8. The battery is forbidden to be disassembled, impacted, squeezed or put into fire. If there is serious expansion, do not continue to use it.
9. Please keep the equipment dry.
10. Do not repair any product yourself. If the device or any part of it does not work properly.
11. When connecting other devices, please refer to the connection method of the user manual. Do not connect unsupported devices at will. To avoid hearing damage, do not use high volume for long periods of time.

SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved

Caution

1. Please follow the relevant laws and regulations and do not use headphones in the following environments:-
For example, gas stations, oil depots, chemical warehouses, etc., where flammable or explosive oil or chemicals are stored, it is strictly forbidden to use equipment. Do not use this equipment in hospital operating rooms, emergency rooms, intensive care units, etc., to avoid interference with medical equipment, please keep away from cardiac pacemakers, hearing aids, implanted cochleas and other medical equipment when using this equipment. Please keep this equipment. More than 15 cm between the pacemaker.
3. To use this device near personal medical devices, consult your physician and device manufacturer.
4. Please observe all safety warnings and regulations regarding the use of this device while driving.
5. To avoid lightning strikes during thunderstorms, do not use outdoors.
6. Do not call while charging.
7. Do not use the charger in a place with high humidity such as a bathroom, as this may result in electric shock, personal injury, fire and damage to the charger.
8. Please comply with the relevant legal provisions that are expressly prohibited in any environment.

SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved



- Do not short the battery metal contacts, resulting in a short circuit hazard, avoiding battery burns and other personal injury caused by burns.
- Do not expose to high temperatures. Overheating of the battery may cause an explosion.
- Do not disassemble, collide, squeeze the battery, avoid causing leakage, overheating, explosion; do not put the battery into the fire, otherwise it will cause fire or explosion;
- If the battery is severely inflated, do not continue to use it.

SHENZHEN FUTURE ACCESS TECHNOLOGY CO.,LIMITED.Explore more at www.hifuturegroup.com © All Rights Reserved